

*Sunbeam*

# BREKKY AND BANQUET

User Guide

PU6400



# Contents

Sunbeam's Safety Precautions	1
Features of your Sunbeam Fryware	
Sunbeam Banquet Frypan	2
Sunbeam Skillet	4
Temperature Setting Guide	6
Using your Fryware	7
Cooking with your Sunbeam Fryware	8
Care and Cleaning	10
Recipes	11

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## SAFETY PRECAUTIONS FOR YOUR SUNBEAM FRYWARE.

- Use your fryware at least 200mm away from walls and curtains.
- Do not immerse the control probe in water.
- If using a plastic spatula do not leave in cooking vessel when hot.
- The fryware must only be used with the control probe provided.
- Avoid using on metal surfaces e.g. sink, hotplate.
- Remove the control probe before cleaning the frypan.
- After cleaning the fryware ensure that the control probe inlet area is completely dry before using again.

**Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

# Features of your Sunbeam Banquet Frypan

## **Integrated knob and adjustable steam vent**

Allows you to accurately control moisture levels during cooking.

## **EasyClean™ non-stick cooking surface**

Enables fat-free cooking and easy wipe down cleaning.

 
## **Control probe inlet**

 
## **Pan tilt lever**

When the lever is in the lowered position the cooking pan is tilted, forcing juices to collect at one end of the pan. Both hands are then free for basting.

## **Extra large cooking vessel**


The large rectangular frypan (380mm x 292mm) is 78mm deep, ideal for cooking extra large meals or liquid-based dishes.

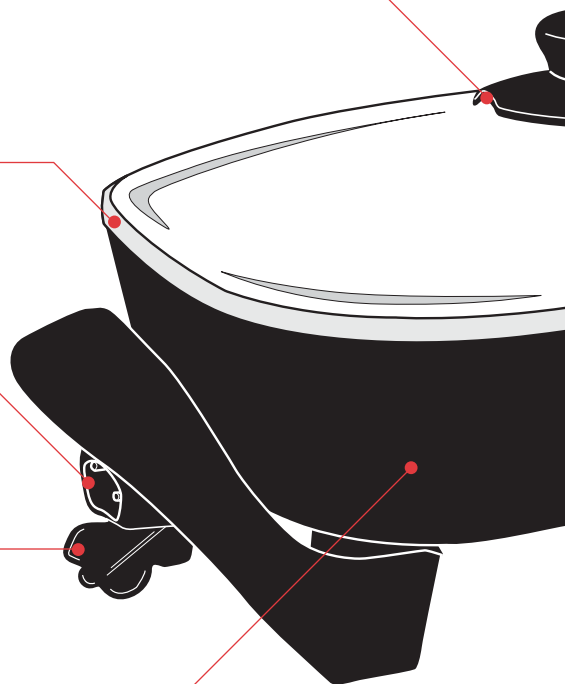

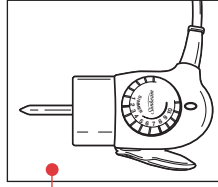

#### **Trigger release control probe**

 The probe is thermostatically controlled and incorporates an indicator light that switches off automatically when the selected temperature has been reached, it then cycles on and off to indicate that the temperature is being maintained.

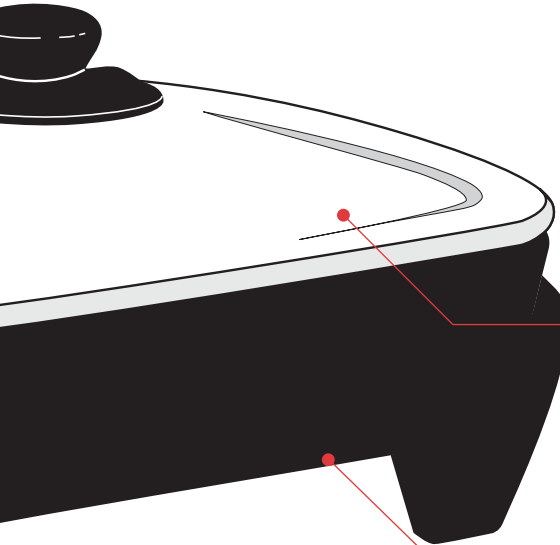

#### **Glass lid**

The clear glass lid allows you to monitor the cooking process without lifting the lid and allowing the heat to escape, ensuring the selected temperature is maintained.

#### **Cast-in element**

The 2200W element is completely cast into the heavy duty base providing superior heat distribution.

# Features of your Sunbeam Skillet

 
## **Cool touch handle**

 
For safe cooking and carrying of your skillet.

## **Control probe inlet**

## **Cast-in element**


The 1200W element is completely cast into the heavy duty base providing superior heat distribution.

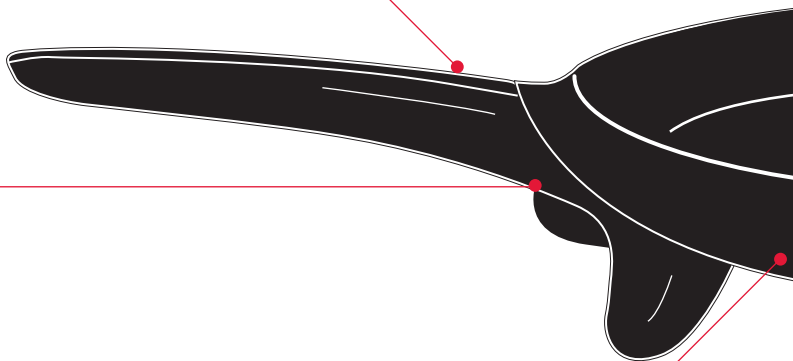

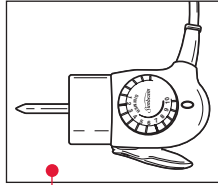

#### **Trigger release control probe**

 The probe is thermostatically controlled and incorporates an indicator light that switches off automatically when the selected temperature has been reached, it then cycles on and off to indicate that the temperature is being maintained.

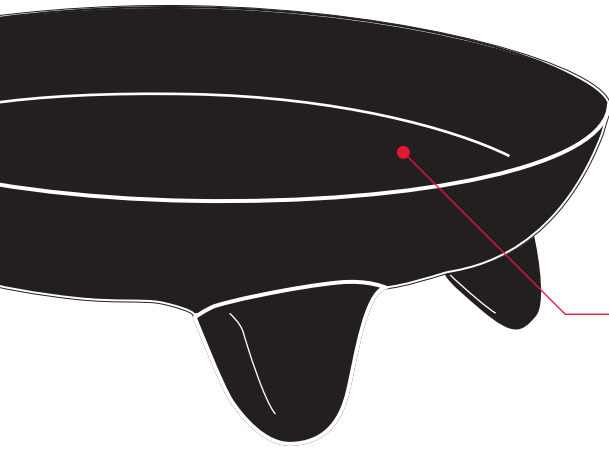

#### **EasyClean™ non-stick cooking surface**

Enables fat-free cooking and easy wipe down cleaning.

# Temperature Setting Guide

The following table provides approximate temperatures for each setting on the control probe. Preheat your frypan/skillet on setting 7-8, then change to your desired setting.

DIAL SETTING	CELSIUS (approx)	FAHRENHEIT (approx)	SUGGESTED USES	TEMPERATURE
1 2	100°C 110°C	212°F 230°F	Keeping food warm	LOW
3 4	125°C 140°C	260°F 285°F	Simmering, slow cooking	
5 6	150°C 160°C	300°F 320°F	Pan frying, roasting	MEDIUM
7 8	175°C 185°C	350°F 365°F	Shallow frying	
9 10	200°C 210°C	390°F 410°F	Searing, sealing and baking	HIGH

**Note:** The suggested uses above are provided as a guide only and may require adjustment to suit different foods and individual tastes. When the dial is set to a low setting, it is normal for food to stop and start bubbling, as the thermostat maintains the selected temperature.



# Using your Fryware

**Before the first use:** Wash, rinse and dry your frypan, skillet and lid. Season the cooking surface by applying a thin coat of cooking oil and rub in with paper towelling.

1. Insert the control probe into the inlet on the frypan/skillet.
2. Plug the cord into a 230-240V power outlet and turn the power on.
3. Preheat the frypan/skillet on setting 7-8. Then set the control probe dial to the desired temperature setting. Refer to page 8 for the temperature guide.

**Note:** The light on the control probe will illuminate and will remain on until the set temperature is reached. It will then cycle on and off throughout cooking, as the temperature is maintained by the thermostat. On initial heating of the frypan/skillet, it is recommended that the temperature be allowed to cycle (the light cycling on and off) several times. This will help the cooking surface to adjust to a more accurate cooking temperature.

## **Using the pan tilt lever**

The pan tilt lever on the frypan is positioned under the inlet where the control probe is inserted.

To tilt the frypan, push the lever down. This allows the fat and juices to drain from the food for crisp, low fat cooking. It also makes it easier to baste food and serve sauces or gravy.

**Note:** Any discolouration on the cooking surface that may occur will not affect the cooking performance. Do not use metal utensils, these will scratch and damage the non-stick cooking surface. Sunbeam recommends only using heat-proof plastic or wooden utensils to stir food.

# Cooking with your Sunbeam Fryware

## Baking

Your frypan can be used for baking cakes, with deliciously moist results.

1. Preheat the frypan to setting 10, with the lid on.
2. Elevate the cake pan or tray from the base of the frypan using a small wire rack.

Cooking times will be longer than those of a conventional oven.

## Basting

The pan tilt lever makes basting easy as it allows the juices to drain to one side of the pan. Reduce the temperature to prevent any fat and juices spattering. Position the pan tilt lever and spoon the juices over the food as desired.

## Boiling Pasta

1. Bring 6 cups of water to the boil on setting 5. Add 1-2 teaspoons of oil to stop the pasta from sticking together.
2. Add 250g (1½ cups) of pasta and cook until tender, for approximately 8-12 minutes.
3. Reduce to a lower setting if the water boils too rapidly.

**Note:** Cooking times will vary with different types of pasta.

## Boiling Rice

1. Bring 6 cups of water to the boil on setting 5. Add 200g (1 cup) of rice and position the lid.
2. Cook until tender, approximately 10-12 minutes, and then drain.
3. Reduce to a lower setting if the water boils too rapidly. Stir occasionally so that the rice does not stick.

## Browning and Sealing Meat

(All models)

It is necessary to brown and seal meat in many recipes. Meat retains its juices and the flavours develop after browning and sealing. This also prevents it from sticking when baking or roasting. Preferably use meat that is at room temperature, as this reduces the cooking time.

1. Preheat the frypan to settings 8-9.
2. Brown meat on all sides, with the lid off.
3. After sealing, reduce the temperature to settings 4-5 and replace the lid until the meat is cooked as desired.

# Cooking with your Sunbeam Fryware continued

## Frying

The frypan and skillet are ideal for shallow or dry frying. Deep frying is not particularly suitable as both the frypan and skillet have shallow sides and a greater surface area, which results in heat loss and the possible overflow of oil.

**Pan frying:** Suitable for eggs, omelettes, bacon, sausages, steaks and chicken pieces. Preheat to settings 5-6 with a little oil to add flavour. Non-stick cooking surfaces do not require a large amount of oil. Steaks should only be turned once during cooking.

**Shallow frying:** Suitable for vegetable pieces e.g roast pumpkin and potato, and crumbed food. Preheat on settings 6-8 with sufficient oil so that the food is half immersed. Cook food with the lid off.

**Sauteéing:** Preheat on settings 5-6 with a little oil to add flavour.

**Stir frying:** Food is cooked quickly, over a high heat and vegetables retain their flavour and crispness. For best results and even cooking, cut food into even sized, smaller pieces.

1. Preheat the frypan on setting 8-9.
2. Slice meat into strips. Coat meat in a little oil and stir-fry in batches until browned. This prevents meat from stewing.
3. Add vegetables and seasoning, stirring continuously. Vegetables which take longer to cook, such as carrots, should be cooked first, adding the other ingredients later. Cook until the vegetables are still slightly crisp. Return the meat back into the pan when the vegetables are almost cooked. The lid can be in position in the last few minutes of cooking.

## Roasting

**Meat and poultry:** The frypan and skillet are ideal for roasting meat and poultry, as the meat retains the flavour and juices.

1. Ensure that the size of the selected piece of meat can sit in the frypan with the lid in position.
2. Preheat the frypan/skillet to settings 8-9. Use only a small amount of oil for less fatty joints and no oil for fatter joints of meat.
3. Brown and seal the meat on all sides and position the lid.
4. After browning, turn the dial to settings 4-5 to cook the meat as desired. Turn meat occasionally during cooking to ensure even cooking.
5. Remove meat from pan and cover with foil. Allow meat to rest for 5-10 minutes, meanwhile you can make a gravy from the juices in the frypan.

**Vegetables:** Cut into even sized pieces. Add to the frypan 45-60 minutes before serving. For crisper vegetables, remove the meat and increase the heat for the last few minutes of cooking.

## Roasting times:

**Note:** These times are for well done. Reduce the times to suit personal taste.

**PORK:** 30-40 minutes per 500g after browning.

**VEAL:** 30-40 minutes per 500g after browning.

**LAMB:** 25-30 minutes per 500g after browning.

**CHICKEN:** 30-35 minutes per 500g after browning.

# Care and Cleaning

Always turn the power off and remove the plug from the power outlet after use and before cleaning. Allow appliance to cool before cleaning.

## **Control probe**

If cleaning is necessary, wipe over with a damp cloth.

**Note:** The control probe must be removed before the frypan/skillet is cleaned and the control probe inlet must be dried before the frypan/skillet is used again.

**Important: Do not immerse the control probe in water or other liquid.**

Store the control probe carefully. Do not knock or drop it as this can damage the probe. If damage is suspected, return the control probe to your nearest Sunbeam Appointed Service Centre for inspection. Refer to the separate warranty and service centre booklet.

## **Frypan Glass lid**

Wash the lid in warm soapy water using a soft sponge, rinse and dry thoroughly. Alternatively, wash the lid in a dishwasher.

## **To clean interior and exterior surface.**

- When cleaning the non-stick coating do not use metal (or other abrasive) scourers. After cleaning, dry the frypan and lid with a soft cloth before storing.
- Wash in hot soapy water or in a dishwasher. Remove stubborn spots with a plastic washing pad or sponge.
- The heating element is totally sealed, making the frypan safe to fully immerse in water, or place in a dishwasher.
- Wash as directed, and re-season the frypan/skillet before using again. In some instances this may not remove all the staining.

# Frypan Recipes

All the recipes have been specifically created and tested by our Sunbeam Test Kitchen for the Sunbeam Brekky and Banquet Set. We hope you enjoy making some delicious meals.

For recipes for your Skillet see page 21.

**Note:** The temperature settings stated in these recipes are a guide only and will vary by model.

---

## Corn Fritters

**Serves 4**  
**Makes approx. 20 fritters**

1 cup self raising flour  
½ teaspoon bicarbonate soda  
½ teaspoon sweet paprika  
½ teaspoon ground coriander  
⅔ cup buttermilk  
2 eggs  
2 cups corn kernels  
1 small red capsicum, diced finely  
3 small shallots, sliced  
2 tablespoons chopped fresh parsley  
1 tablespoon chopped fresh coriander  
Sea salt  
Freshly ground black pepper  
Olive oil  
Tomato chilli jam, to serve

1. Combine flour, soda, paprika and coriander in a bowl; whisk through buttermilk and eggs to form a batter.
2. Combine corn, capsicum, shallots, parsley and coriander in a large bowl. Stir through the batter; season with salt and pepper.
3. Heat frypan on setting 8. Drizzle a little olive oil in frypan and spoon tablespoonfuls of mixture into pan. Cook fritters for 2-3 minutes on each side until golden.
4. Serve with tomato chilli jam if desired.

## Gyoza (Japanese Dumplings) Makes approx. 50

150g pork mince  
150g chicken mince  
2 tablespoons kecap manis (sweet soy)  
1 teaspoon sugar  
1 tablespoon mirin  
1 egg  
2 teaspoons sesame oil  
2½ cups Chinese cabbage, shredded finely  
⅓ cup finely chopped water chestnuts  
4 shallots, chopped finely  
50 sheets gow gee wrappers  
vegetable oil for pan frying

### Dipping Sauce

2 tablespoons kecap manis  
1 tablespoon black vinegar

1. Combine all ingredients in a bowl and mix well.
2. Lay several sheets of gow gee wrappers out onto a bench top. Have a tray lined with baking paper ready to place the prepared gyoza onto.
3. Place a rounded teaspoon of filling into the centre of the wrapper. Moisten the edges with a little water. Fold the wrapper over the filling but before sealing carefully pleat on one side. The pastry will look plain on one side but have a small pleat on the other. Gently press the pastry to seal. Repeat with remaining wrappers.

## Frypan recipes continued

4. Heat frypan on setting 8. Heat 1 tablespoon of oil in the frypan and place the dumplings, in batches, into the pan, pleat side up. Cook until the dumplings are golden on the bottom. Do not turn. Carefully pour enough water in the frypan so that the dumplings are half covered. Place the lid on the frying pan and cook, covered for 1 minute. Remove lid and cook, uncovered, until all the water has evaporated. Remove from pan, repeat with remaining dumplings.

**Note:** The water should be simmering the whole time. If this does not happen increase the heat to setting 10.

5. Serve with dipping sauce.

**Tip:** Kecap manis, mirin and black vinegar are available at Asian grocery stores.

### Soya Sauce Chicken Wings

**Serves 4**

- 1½ kg chicken wings
  - ⅓ cup honey
  - ½ cup low salt soy sauce
  - 2 teaspoons Chinese cooking wine
  - 2 cloves garlic, crushed
  - 3 teaspoons grated fresh ginger
1. Cut wings at joints and discard tips.
  2. Combine remaining ingredients in a jug.
  3. Place wings in a single layer in frypan. Pour sauce over wings and turn to coat.
  4. Turn frypan onto setting 6. Cook wings, turning occasionally. Cook for about 30 minutes or until browned and cooked through.
  5. Serve with rice.

**Tip:** Chinese cooking wine is available from Asian grocery stores. If you cannot find it simply replace with sherry or omit completely.

### Spanish Paella

**Serves 6-8**

- 8 large green prawns
  - 8 small black mussels
  - 3½ cups fish/chicken stock
  - 1 teaspoon saffron threads
  - 180g chorizo sausage, sliced
  - 200g chicken thighs, halved
  - 1 tablespoon extra virgin olive oil
  - 1 medium onion, chopped finely
  - 1 clove garlic, crushed
  - ¼ teaspoon smoked paprika
  - 1 x 400g canned tomatoes
  - 1½ cups Arborio or Spanish rice
  - 300g whole pipis, purged
  - ½ cup frozen peas
  - 1 small roasted red capsicum, sliced
1. Peel four of the prawns and devein. Leave the other four whole for presentation. Clean and de-beard mussels.
  2. Place stock and saffron in a saucepan and heat gently to infuse. Cover and keep warm.
  3. Heat the frypan on setting 8. Cook chorizo in pan until golden; drain on paper towelling.
  4. In same pan cook the chicken thighs and whole prawns in chorizo oil until just cooked through; set aside.
  5. Reduce heat to 6 add extra virgin olive oil, if needed, in frypan and cook onions and garlic until the onions are translucent; add paprika and cook for a further 30 seconds.
  6. Add tomatoes and cook on setting 6 for 2-3 minutes. Add rice and cook, stirring until well coated. Add stock and stir to combine. Reduce heat to 3 and cook, covered for 10 minutes.

## Frypan recipes continued

7. After 10 minutes check rice, add a little water if the rice looks too dry. Cook, covered, for a further 5 minutes if the rice is still quite hard.

8. Arrange raw seafood, chicken, chorizo, whole prawns, peas, roasted capsicum, over rice and cook, covered for a further 5 minutes or until the seafood is cooked and the rice is tender. Turn heat off and keep covered for 5 minutes before serving.

### **Pan fried Chicken Breast with Salsa Verde**

**Serves 6**

1-2 tablespoons olive oil

6 chicken breast fillets

#### **Salsa Verde**

1 cup flat leaf parsley

½ cup dill

½ cup mint leaves

2 cloves garlic

1 tablespoon small capers

1 tablespoon grated lemon rind

Sea salt and freshly ground black pepper

¾ cup extra virgin olive oil

1. Heat frypan on setting 7. Add oil and cook chicken, uncovered, until browned on both sides and cooked through. Remove from heat and serve with Salsa Verde

2. To make the Salsa Verde, blend or process all ingredients until a chunky sauce texture is achieved.

**Tip:** Salsa Verde also goes very well with pan fried fish fillets.

### **Pan Fried Fish with Garlic and Lemon** **Serves 4**

4 fillets (800g) white fish fillets

2 tablespoons olive oil

2 cloves garlic, crushed

2 tablespoons lemon juice

2 spring onions, finely chopped

¼ cup shredded fresh basil leaves

Sea salt

Freshly ground black pepper

Steamed New Potatoes or Mash, to serve

Steamed Broccolini, to serve

1. Place fish in a shallow baking dish. In a small bowl combine the garlic, lemon juice, spring onions, basil, salt and pepper and mix well.

2. Pour marinade over fish and allow to sit at room temperature for 20 minutes.

3. Heat frying pan on setting 9. Add oil and cook fish for 3-5 minutes on both sides until just cooked through.

**Note:** Cooking time will vary depending on the thickness of each fillet.

4. Serve fish with potatoes and steamed broccolini.

## Frypan recipes continued

### Beef Stroganoff

Serves 4

2 tablespoons flour  
1 kg rump steak, cut into strips  
2 tablespoons olive oil  
2 small cloves garlic, crushed  
¼ cup tomato paste  
1 cup beef stock  
250g mushrooms, sliced  
150ml sour cream  
Salt and freshly ground black pepper

1. Dust beef in flour, shaking off excess flour. Heat oil in frypan on a setting 6; cook beef in batches until browned.
2. Return all beef to pan and add remaining ingredients, except sour cream. Cover and cook on setting 4 for about 45 minutes or until the beef is tender.
3. Stir through sour cream. Season with salt and pepper. Serve with buttered noodles.

### Creamy Oyster Chicken

Serves 4

800g chicken tenders  
¼ cup flour  
1 tablespoon olive oil  
300ml cream  
¼ cup oyster sauce  
200g small button mushrooms, quartered  
freshly ground black pepper  
steamed broccoli, to serve  
steamed rice, to serve

1. Lightly coat chicken in flour. Heat oil in frypan on setting 8. Cook chicken, in batches, until golden on each side. Remove from pan. The chicken should not be completely cooked through at this stage.
2. Add cream and oyster sauce to frypan; stir to combine. Add mushrooms and cook for 1 minute. Return chicken to frypan and cook, stirring occasionally until the sauce has thickened and the chicken is cooked through.
3. Serve with steamed broccoli and rice.



## Frypan recipes continued

### Steamed Salmon Parcels

**Serves 4**

4 x 180g Atlantic salmon fillets  
1 stalk lemon grass, white only, chopped finely  
4 shallots, sliced thinly  
½ cup coriander leaves  
1 large red chilli, seeded and sliced  
2 cloves garlic, crushed  
2 teaspoons grated fresh ginger  
½ cup coconut milk  
Sea salt  
Freshly ground black pepper  
1 tablespoon peanut oil  
4-6 baby bok choy, quartered  
Steamed jasmine rice, to serve

1. Preheat frypan on heat 8 with the lid on for 5 minutes.
2. Combine the lemon grass, shallots, coriander, chilli, garlic, ginger, coconut milk and salt and pepper in a bowl and mix well.
3. Place each piece of salmon on four individual pieces of aluminium foil. Divide the coconut mixture evenly over the tops of the salmon. Fold each piece of foil up to make four sealed parcels.
4. Place four parcels in frypan and cook, covered, on setting 6 for about 12-15 minutes or until cooked as desired. Remove from heat.
5. Quickly increase heat in frypan and heat oil; toss bok choy for 1-2 minutes until wilted; season with salt and pepper.
6. Serve salmon with bok choy and steamed jasmine rice.

### Dhal

**Serves 4**

1 tablespoon vegetable oil  
1 medium onion, finely chopped  
1 clove garlic, crushed  
3 teaspoons ground cumin  
½ teaspoon cumin seeds  
1 teaspoon black mustard seeds  
2 tablespoons tomato paste  
2 cups red lentils, rinsed and drained  
2 cups vegetable stock  
1 litre water  
400g can chopped tomatoes  
3 baby eggplants, chopped coarsely  
4 hard boiled eggs, optional  
salt to taste

1. Heat oil in frypan on setting 4. Add onion and garlic and cook, stirring, for 2-3 minutes or until onion is soft.
2. Add dried spices and cook a further 1 minute, or until spices are fragrant. Stir through tomato paste and cook for 2 minutes.
3. Increase heat to setting 9; add lentils, stock and water and bring mixture to the boil. Reduce heat to setting 3 and cook, uncovered, stirring occasionally, until the mixture thickens slightly.
4. Add the tomatoes and eggplant and cook for a further 10 minutes then cook, covered, for another 10 minutes or until the dhal has thickened and the eggplant is soft.
5. Add whole peeled eggs and stir gently until heated through.
6. Season to taste.

## Frypan recipes continued

### **Penne Boscaiola**

**Serves 4**

6 rashers bacon  
200g sliced button mushrooms  
 $\frac{2}{3}$  cup white wine  
300ml cream  
Freshly ground black pepper  
500g penne  
shaved parmesan, to serve

1. Have a large pot of boiling water ready.
2. Remove rind from bacon and slice into 5mm pieces.
3. Heat frypan on setting 8. Cook bacon until golden. Add mushrooms and stir through.
4. Add wine and cook, stirring, until the wine has reduced by half. Add cream and cook, stirring occasionally, until the sauce has thickened slightly.
5. Cook pasta until just tender, drain and add to sauce and stir through. Season with salt and pepper and serve immediately with shaved parmesan.

### **Lamb Rack with Garlic and Parmesan Crust**

**Serves 4**

2 x 400g lamb rack roast, French trimmed  
4 slices of day old bread, crust removed  
2 cloves garlic, chopped  
2 tablespoons of grated fresh parmesan  
1 tablespoon of chopped fresh rosemary  
2 tablespoons of seeded mustard  
Olive oil spray  
Mashed potatoes, to serve

1. Preheat frypan on setting 7.
2. Place lamb racks on a chopping board, having the bones interlocked in the middle.
3. Combine bread, garlic, parmesan and rosemary in a food processor. Process until mixture resembles fine breadcrumbs
4. Spread mustard evenly over the outside of the cutlets flesh.
5. Press the bread mixture over the mustard and spray well with olive oil spray.
6. Place lamb racks in frying pan, reduce heat to setting 3 and cook, covered, for about 35 minutes or until cooked as desired. Remove from frypan and cover with foil. Allow to rest 5-10 minutes.
7. Cut lamb into individual cutlets and serve with mashed potatoes.

**Tip:** Recipe can be doubled to serve 8.

## Frypan recipes continued

### Roast Chicken with Stuffing

Serves 4

1.2kg whole fresh chicken  
sea salt  
freshly ground black pepper

#### Stuffing

1 onion, chopped finely  
2 teaspoons olive oil  
3 cups fresh bread crumbs  
30g softened butter  
1 teaspoon grated lemon rind  
2 tablespoons chopped fresh parsley  
2 teaspoons chopped fresh thyme

1. Wash and clean chicken thoroughly. Pat dry with paper towelling.
2. To make stuffing, cook onion in oil until softened. Add to remaining stuffing ingredients and mix well.
3. Place the stuffing inside the cavity of the chicken. Tuck the wings back and tie the base of the chicken with cooking string so that the legs are crossed and securely positioned.
4. Preheat frypan on setting 7. Brush chicken with a little oil and salt and pepper.
5. Brown chicken on all sides; reduce heat to setting 5 and cook, covered, with the vent open, for about 1½ hours or until cooked through.

**Tip:** If cooking roast vegetables, place in frying pan ¾ to 1 hour before the end of cooking.

### Roast Lamb

Serves 4-6

1 leg lamb appropriate size to fit in frypan with lid on  
4-6 garlic cloves, sliced  
3-4 sprigs rosemary, snipped into small pieces  
2 tablespoons olive oil  
sea salt  
freshly ground black pepper  
6 small picking onions  
400g pumpkin, cut into chunks  
½ bunch baby carrots, trimmed  
2 potatoes, cut into chunks  
1 sweet potato, peeled and thickly sliced

1. Using a small sharp knife, pierce the lamb all over, making indentations about 2cm deep. Push a piece of garlic into each slit and a small piece of rosemary. The rosemary should be poking out slightly.
2. Heat frypan to setting 10. Add oil and brown lamb all over. Season with salt and pepper; add onions to pan. Reduce heat to setting 6. Cook lamb, covered, for about 1 hour and 15 minutes.
3. Add vegetables to pan and cook for a further 25 minutes. Remove lamb and allow to rest, covered, until the vegetables are cooked as desired.

## Frypan recipes continued

### Mustard Seed Potatoes

**Serves 8**

- 1.5kg baby new potatoes
- 2 tablespoons extra virgin olive oil
- 2 tablespoons black mustard seeds
- 1-2 teaspoons sea salt flakes

1. Place potatoes into frypan and pour enough water in to cover. Cook potatoes, covered, on Setting 10 until tender. Drain well for 10 minutes.
2. Heat frypan on Setting 8, add oil, potatoes, mustard seeds and salt; stir to coat. Place lid on potatoes and cook, stirring occasionally, until the potatoes are golden.

**Tip:** Keep the lid on during cooking as the mustard seeds pop!

### Family Beef Casserole with Semi Dried Tomatoes

**Serves 4**

- 1kg chuck steak, cut into 2cm cubes
- $\frac{1}{4}$  cup flour

2 tablespoons olive oil

1 bunch of spring onion, stalk trimmed, peeled and left whole

1 clove garlic, crushed

2 tablespoons tomato paste

$\frac{1}{4}$  cup red wine

2 small carrots, diced

1 celery stalk, sliced

$\frac{1}{2}$  cup beef stock

$\frac{1}{2}$  cup water

1 tablespoon chopped fresh thyme

1 bay leave

$\frac{1}{2}$  cup semi dried tomatoes

Salt and freshly ground black pepper

1. Dust beef in flour, shaking off excess flour. Heat oil in frypan and cook beef in batches until brown. Set aside.
2. To the same pan, add onion and garlic, cook stirring for 1-2 minutes, or until onion starts to colour. Stir tomato paste cook 1 minute.
3. Add wine and allow alcohol to evaporate and liquid to reduce slightly. About 2 minutes.
4. Place beef, vegetables, stock, water, thyme and bay leaves in frypan. Cover and cook on setting 4 for 1 hour stirring occasionally. After 1 hour add tomatoes and cook for a further 20-30 minutes or until beef is tender.
5. Season to taste and serve hot with mashed potatoes or rice.

## Frypan recipes continued

### **Caramelised bananas with Hot Chocolate Sauce and Whipped Cream**

**Serves 4**

4 large bananas, peeled  
¼ cup firmly packed brown sugar  
1 teaspoon cinnamon  
Whipped cream, to serve

#### **Hot chocolate sauce**

100g dark chocolate, chopped  
30g white marshmallows, chopped  
150ml thickened cream

1. Preheat frypan on setting 4.
2. Cut bananas in half lengthways. Sprinkle the combined sugar and cinnamon over the cut bananas. Press gently into the banana.
3. Place bananas, cut side down and cook, uncovered, for about 6 minutes or until the sugar has caramelised and the banana has softened. Serve bananas with hot chocolate sauce and whipped cream.
4. To make the hot chocolate sauce, combine all ingredients in a small saucepan and cook, stirring, over a low heat, until melted.

### **Spiced Rhubarb and Berry Compote**

**Serves 4-6**

2 bunches of rhubarb, cut into 2cm pieces  
500g frozen mixed berries  
¾ cup sugar  
1 cinnamon stick  
3 whole cloves  
1 teaspoon grated orange rind

1. Combine all ingredients into the frypan. Cook, stirring gently, on setting 8 until the sugar dissolves. Cover and cook on setting 5 for about 15 minutes or until the rhubarb is tender.
2. Serve hot with ice cream, custard or with your favourite pudding.

## Frypan recipes continued

### Crème Caramel

- 1 cup sugar
- ½ cup water
- ⅓ cup caster sugar
- 3 eggs
- 2 egg yolks
- 250ml cream
- 250ml milk
- 1 vanilla bean, seeds scraped

1. Combine sugar and water in a small saucepan. Stir over a low heat until the sugar has dissolved. Increase heat; boil without stirring, until the toffee turns a golden colour.
2. Remove from heat, once the bubbles have subsided, pour into 6 individual 1-cup capacity metal moulds. Allow to cool.
3. Beat eggs and sugar until light and creamy.
4. Heat milk, cream, vanilla bean and seeds until almost boiling. Whisk hot milk into egg mixture. Pour mixture through a strainer.
5. Pour mixture into moulds. Place moulds into frypan. Pour enough boiling hot water to come halfway up the sides of the moulds.
6. Cook, covered, on setting 6 for about 15 minutes or until the custard has set.

**Note:** Be careful when removing lid to check custard that no water from the lid goes into the moulds

**Serves 6**

### Individual Sticky Date Puddings

**Serves 8**

- 200g coarsely chopped dried dates
- 1 teaspoon bicarbonate soda
- 1¼ cups boiling water
- 60ml olive oil
- 1 cup firmly packed brown sugar
- 1 cup self raising flour
- ¼ teaspoon mixed spice
- 2 eggs

#### Butterscotch sauce

- 160g butter
- ⅔ cup firmly packed brown sugar
- 1 cup (250ml) thickened cream

1. Preheat frypan on setting 4 with the lid on. Grease 8 individual 1-cup capacity metal moulds
2. Place dates, soda and boiling water into a blender or food processor. Place lid on and allow the mixture to stand for 5 minutes.
3. Add oil and sugar and pulse 3 times.
4. Add remaining ingredients and pulse mixture until just combined. Scrape down sides of bowl if necessary. Do not over process.
5. Pour mixture into prepared moulds. Place moulds in frypan and carefully pour enough boiling water to come half way up the sides of the moulds. Cook for about 25 minutes or until cooked when tested with a wooden skewer. Carefully remove from frypan; stand for 5 minutes before turning out onto a wire rack.
6. Serve pudding with butterscotch sauce. To make sauce, heat all ingredients in a small saucepan over a low heat until combined.

**Tip:** Puddings can be made in advance and then rewarmed in a microwave.

# Skillet Recipes

The following frypan recipes are also suitable for your Skillet. Please note that it will be necessary to cook in batches.

Corn Fritters	Page 11
Pan Fried Chicken Breast with Salsa Verde	Page 13
Pan Fried Fish with Garlic and Lemon	Page 13
Caramelised Bananas with Hot Chocolate sauce	Page 19

---

## Buttermilk Pancakes

**Makes 8**

- 1 cup self raising flour
  - 2 tablespoons sugar
  - ½ teaspoon bicarbonate of soda
  - 1 egg, lightly beaten
  - 2 tablespoons vegetable oil
  - 1 cup buttermilk
  - 60g butter
1. Sift dry ingredients into a large bowl. Make a well in the centre.
  2. Whisk the combined wet ingredients into the dry ingredients until smooth.
  3. Heat skillet on setting 6. Melt some of the butter and spoon ¼ cupfuls of mixture at a time into the frypan. Turn the pancakes once the bottom is golden and the tops starts to bubble. Cook until the underside is golden.
  4. Serve with extra butter and maple syrup.

## Breakfast Pancakes

**Makes 8**

- 1 egg, lightly beaten
  - 1 ¼ cup milk
  - 1 cup SR flour
  - 1 tablespoon caster sugar
  - 1 tablespoon maple syrup
  - 125g block Cream Cheese, softened
  - 2 tablespoons butter
  - handful of blueberries, washed
  - maple syrup, to serve
1. Sift flour and sugar into a bowl. Gradually whisk in combined egg and milk until smooth.
  2. Heat the skillet to 6. Melt one teaspoon of butter in skillet, drop ¼ cup of mixture into the skillet and cook until bubbles form on the surface, flip over and cook the other side until golden brown. Continue with remaining mixture.
  3. Combine together the maple syrup and cream cheese until well blended.
  4. Stack two pancakes with maple syrup, cream cheese mixture spread in between. Top with blueberries and drizzle with extra maple syrup.

## Skillet Recipes continued

### Pikelets

**Makes approx 12**

1 egg  
¼ cup sugar  
1 cup self raising flour  
¾ cup milk  
pinch salt  
butter for frying

1. Beat egg and sugar with an electric mixer until light and creamy.
2. Add flour, milk and salt and beat until smooth.
3. Heat skillet on setting 8. Melt a little butter in skillet and wipe away any excess with paper towelling.
4. Spoon heaped spoonfuls of batter in skillet and cook on both sides until golden.
5. Serve with butter, jam, cream or chocolate hazelnut spread.

**For savoury pikelets:** Reduce sugar to 2 tablespoons and stir through chopped fresh herbs of choice. Top with slices of prosciutto, goats cheese and rocket or cream cheese, smoked salmon and capers.

### Breakfast Burrito

250g cherry tomatoes  
2 teaspoons olive oil  
420g can kidney beans, rinsed, drained  
⅓ cup fresh flat-leaf parsley, coarsely chopped  
1 tablespoon coarsely chopped pickled jalapeño chilli  
1 tablespoon lime juice  
1 large avocado (320g)  
8 corn tortillas, warmed  
50g baby spinach leaves  
1 cup (120g) cheddar cheese, coarsely grated

1. Heat the skillet on setting 8. Add the tomatoes and oil and fry until tomatoes have softened.
2. Combine beans, parsley, chilli and half the lime juice in medium bowl with tomatoes.
3. Mash avocado in small bowl with remaining lime juice.
4. Make up the burritos by placing filling on one side of the tortilla, wrap tortilla around the filling.
5. Place burritos back into the skillet and cook until golden brown and crispy.
6. Serve warmed tortillas topped with spinach leaves and cheese.



## Skillet Recipes continued

### Breakfast Mixed Grill Frittata

8 x chipolata sausages

6 rashers bacon

4 tomatoes, halved

$\frac{1}{3}$  cup plain flour

1  $\frac{1}{2}$  cups milk

3 eggs

3 Shallots, chopped

1 cup grated cheddar cheese

2 tablespoons chopped fresh parsley

1. Heat the skillet on setting 8. Fry bacon, sausages and tomatoes until browned.
2. Whisk flour and milk in medium bowl until smooth; whisk in eggs.
3. Stir in remaining ingredients; pour mixture into frying pan. Turn skillet down to 4 and place lid on. Cook until egg mixture is set.
4. Slice and serve warm.

### Zucchini Breakfast Fritters

3 medium zucchini, coarsely grated, excess moisture squeezed out

$\frac{1}{2}$  cup self-raising flour

$\frac{1}{2}$  cup parmesan, finely grated

3 shallots, ends trimmed, thinly sliced

1 egg, whisked

$\frac{1}{4}$  cup fresh continental parsley, chopped

2 teaspoons dried oregano leaves

1 teaspoon salt

$\frac{1}{4}$  teaspoon ground nutmeg

4 teaspoons olive oil

1. Place zucchini in a bowl. Stir in self-raising flour, parmesan, shallots, egg, parsley, oregano, salt and nutmeg.
2. Heat 2 teaspoons olive oil in the skillet on setting 8. Drop four 2-tablespoonful measures of zucchini mixture into pan. Cook for 1  $\frac{1}{2}$  minutes each side or until golden and cooked through. Transfer to a plate lined with paper towel. Repeat with 2 teaspoons olive oil and remaining zucchini mixture.
3. Serve with natural yoghurt and fresh limes.

## Skillet Recipes continued

### Scrambled Eggs

**Serves 2**

4 large eggs  
2/3 cup cream  
Sea salt  
Freshly ground black pepper  
20g butter  
Toast, to serve

1. In a medium bowl, whisk the eggs, cream, salt and pepper until well combined. Heat butter in skillet on setting 5 until it bubbles.
2. Pour in the egg mixture and cook, stirring with a wooden spoon, until the eggs are just starting to firm but are still quite moist.
3. Serve immediately with hot, buttered toast.

### Sweet crepes

**Makes approximately  
16 crepes**

3 eggs  
60g butter, melted  
1 3/4 cups milk  
250g plain flour  
2 tablespoons caster sugar  
pinch salt

1. Place crepe ingredients into a blender jug and blend on low for about 20 seconds or until combined. Strain into a jug and stand for 30 minutes.
2. Heat skillet on setting 7. Pour about 1/4 cup of batter into the greased pan. Tilt the pan to spread the mixture evenly. Cook over a low heat on both sides until golden. Repeat with remaining mixture.
3. Serve crepes with lemon juice and sugar or hazelnut spread.

### Omelette with Porcini Mushrooms

**Serves 2**

40g dried porcini mushrooms  
4 eggs  
sea salt  
freshly ground black pepper  
butter  
1/4 cup grated cheese

1. Soak mushrooms in hot water for 10 minutes; drain and roughly chop.
2. Whisk eggs, mushrooms, salt and pepper in a medium bowl until combined.
3. Melt butter in skillet on setting 8; once bubbles have subsided pour in egg mixture. Once the egg mixture has begun to cook underneath use a wooden spoon to bring in the edges of the egg mixture into the centre of the skillet (this creates height in your omelette). Do this 2-3 times then allow the omelette to brown slightly underneath and almost set on the top.
4. Sprinkle the cheese over half of the omelette, then using a spatula, carefully fold the omelette in half. Cook for a further 30 seconds.
5. Carefully tip omelette onto a serving plate.

# 12 Month Replacement Guarantee

This Sunbeam product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase by creating a MySunbeam account on our website and uploading a copy of your original receipt.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
  - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

- servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
- use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
- exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

**The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.**

**In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.**

**Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.**

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

## Australia

[www.sunbeam.com.au](http://www.sunbeam.com.au)  
1300 881 861  
Units 5 & 6,  
13 Lord Street,  
Botany NSW 2019  
Australia

## New Zealand

[www.sunbeam.co.nz](http://www.sunbeam.co.nz)  
0800 786 232  
Level 6, Building 5,  
Central Park,  
660-670 Great South Road,  
Greenlane, Auckland  
New Zealand

## Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

<b>Australia</b>	visit	<a href="http://www.sunbeam.com.au">www.sunbeam.com.au</a>
	phone	1300 881 861
	mail	Units 5 & 6, 13 Lord Street, Botany NSW 2019 Australia.

<b>New Zealand</b>	visit	<a href="http://www.sunbeam.co.nz">www.sunbeam.co.nz</a>
	phone	0800 786 232
	mail	Level 6, Building 5, Central Park, 660-670 Great South Road, Greenlane, Auckland.

Sunbeam Corporation Limited | ABN 45 000 006 771  
Sunbeam Corporation is a division of GUD Holdings Limited.

Sunbeam is a registered trademark.  
'Brekky and Banquet' is a trademark of Sunbeam Corporation.

Made in China to Sunbeam's specification.  
Due to minor changes in design or otherwise,  
the product you buy may differ slightly from the one shown here.  
Approved by the appropriate electrical regulatory authorities.

©Copyright Sunbeam 2014.